



Installation Guide for 21-23 Toyota GR86 | Subaru BRZ LED Tail Lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following installation guide we take you through the installation of your new **ALPHAREX LED TAIL LIGHTS** for your 21-23 Toyota GR86 | Subaru BRZ step by step.

DO NOT USE DIELECTRIC GREASE!



Table of Contents

PART I REMOVE TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove the bolts
- **STEP 2.** Transfer the bracket
- **STEP 3.** Turn Signal Lighting Style
- **STEP 4.** Install the tail lights
- **STEP 5.** Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper

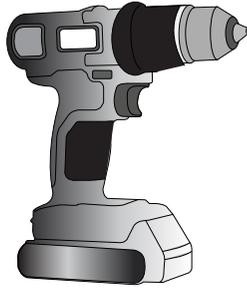

Power Tool



Phillips
Screwdriver



1/4 Ratchet



1/4 Extension

10mm



Socket

STEP 1. REMOVE THE BOLTS

Whenever working on your vehicle always make sure your vehicle is OFF and parked. Open the trunk and start by removing the tail light's bolts.



To detach the tail light, begin by raising the plastic guard cover. Loosen the 3 X 10mm bolts by turning them counterclockwise.



Carefully pull the tail light assembly outward towards you to remove it from its position.



Remove the tail light by disconnecting the plug socket.




Please follow the same procedure for the opposite side of the tail light.



STEP 2. TRANSFER THE BRACKET

Position the stock tail lights on the work table and Initiate the process by loosening the bracket screws.

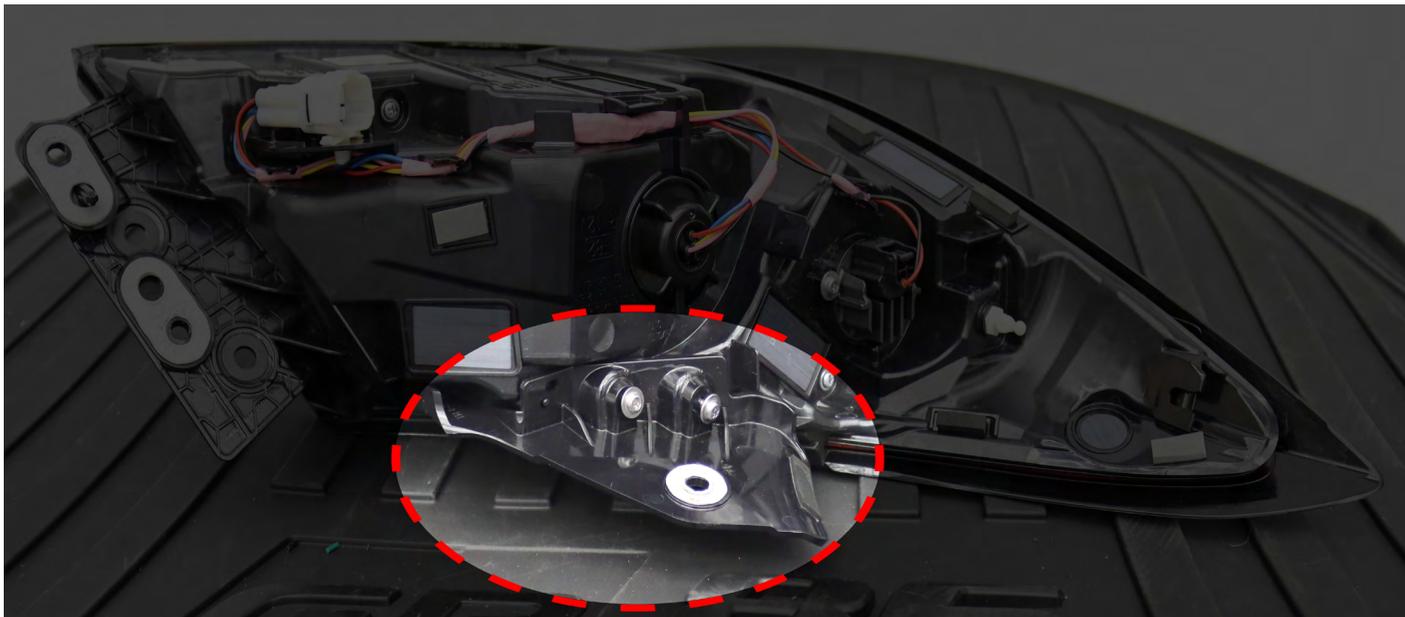

Utilize the previously removed bracket to transfer and securely install it onto the new ALPHAREX tail light. Kindly replicate the identical steps for the opposite side of the tail light.



STEP 3. TURN SIGNAL LIGHTING STYLE

Prior to installing the new ALPHAREX tail lights, you have the option to select the desired turn signal lighting style.

Please note that whichever choice you opt for, ensure to apply the same selection to both tail lights to maintain consistent lighting.

If Green connectors are unplugged: the lighting style will be Sequential only.

SEQUENTIAL TURN SIGNALS




if Green connectors are connected: the lighting style will be Blinking only.

BLINKING TURN SIGNALS (flash only; not sequential)



STEP 4. INSTALL THE TAIL LIGHTS

Connect the light socket into the tail light assembly, taking care not to disrupt the wire placement that could affect proper installation.

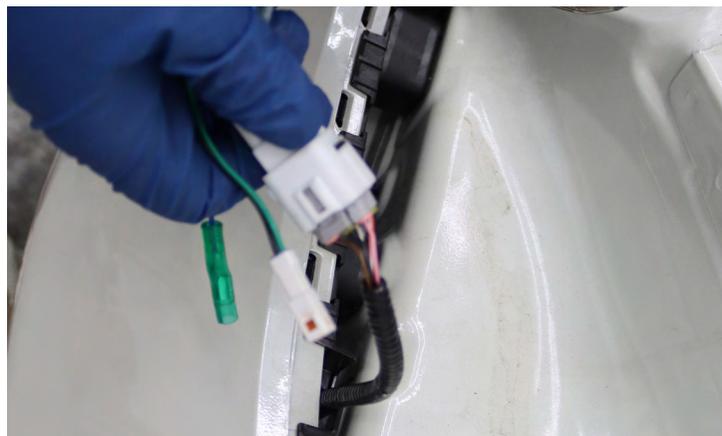

To finish the installation, follow the reverse procedure of the removal process.



STEP 5. COMPLETE INSTALLATION

Congratulations! you have completed the installation for ALPHAREX 21-23 Toyota GR86 | Subaru BRZ LED Tail Lights.



(Pictures shown with optional Toyota GR86 / BRZ ALPHAREX TRUNK LED LIGHT BAR)

